


BP-208SP-P7-A10

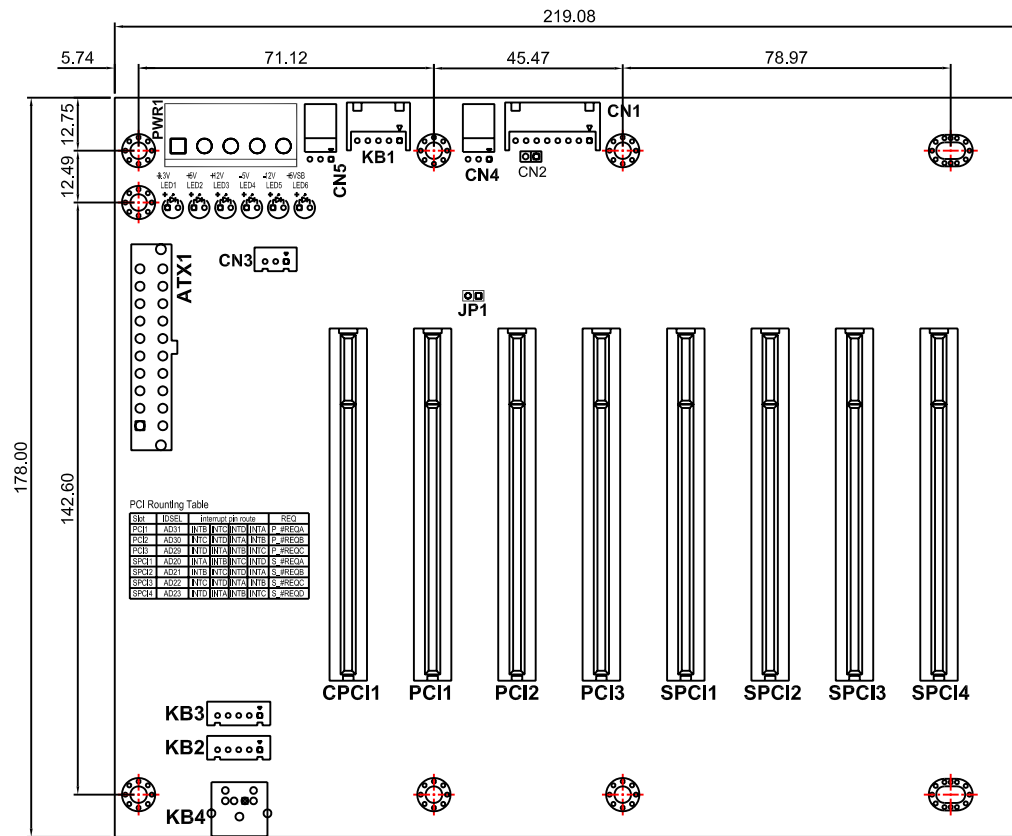

Note:

- A. CPCI Slot only can use for PICMG_PCI CPU card, another CPCI Slot can't use for standard PCI card in the meantime.**
- B. PICMG_PCI CPU card must intall on CPCI Slot.**

Alarm (CN1)



- Pin1 : +5VSB
- Pin2 : +12V
- Pin3 : +3.3V
- Pin4 : -12V
- Pin5 : +5V
- Pin6 : SMB_CLK
- Pin7 : SMB_DATA
- Pin8 : GND

SMBus (CN2)



- Pin1 : SMB_CLK
- Pin2 : SMB_DATA

PS-ON (CN3)



 
- Pin1 : PS-ON
- Pin2 : GND
- Pin3 : +5VSB

Fan (CN4,5)



- Pin1 : GND
- Pin2 : +12V
- Pin3 : NC

Keyboard (KB1,2,3)



- Pin1 : KB_CLOCK
- Pin2 : KB_DATA
- Pin3 : NC
- Pin4 : GND
- Pin5 : VCC

PCI Routing Table

Slot	IDSEL	interrupt pin route	REQ
PCI1	AD31	INTB INTC INTD INTA	P_#REQA
PCI2	AD30	INTC INTD INTA INTB	P_#REQB
PCI3	AD29	INTD INTA INTB INTC	P_#REQC
SPCI1	AD20	INTA INTB INTC INTD	S_#REQA
SPCI2	AD21	INTB INTC INTD INTA	S_#REQB
SPCI3	AD22	INTC INTD INTA INTB	S_#REQC
SPCI4	AD23	INTD INTA INTB INTC	S_#REQD